


triton 1/2" Precision Router SPARE PARTS LISTING

TRA001

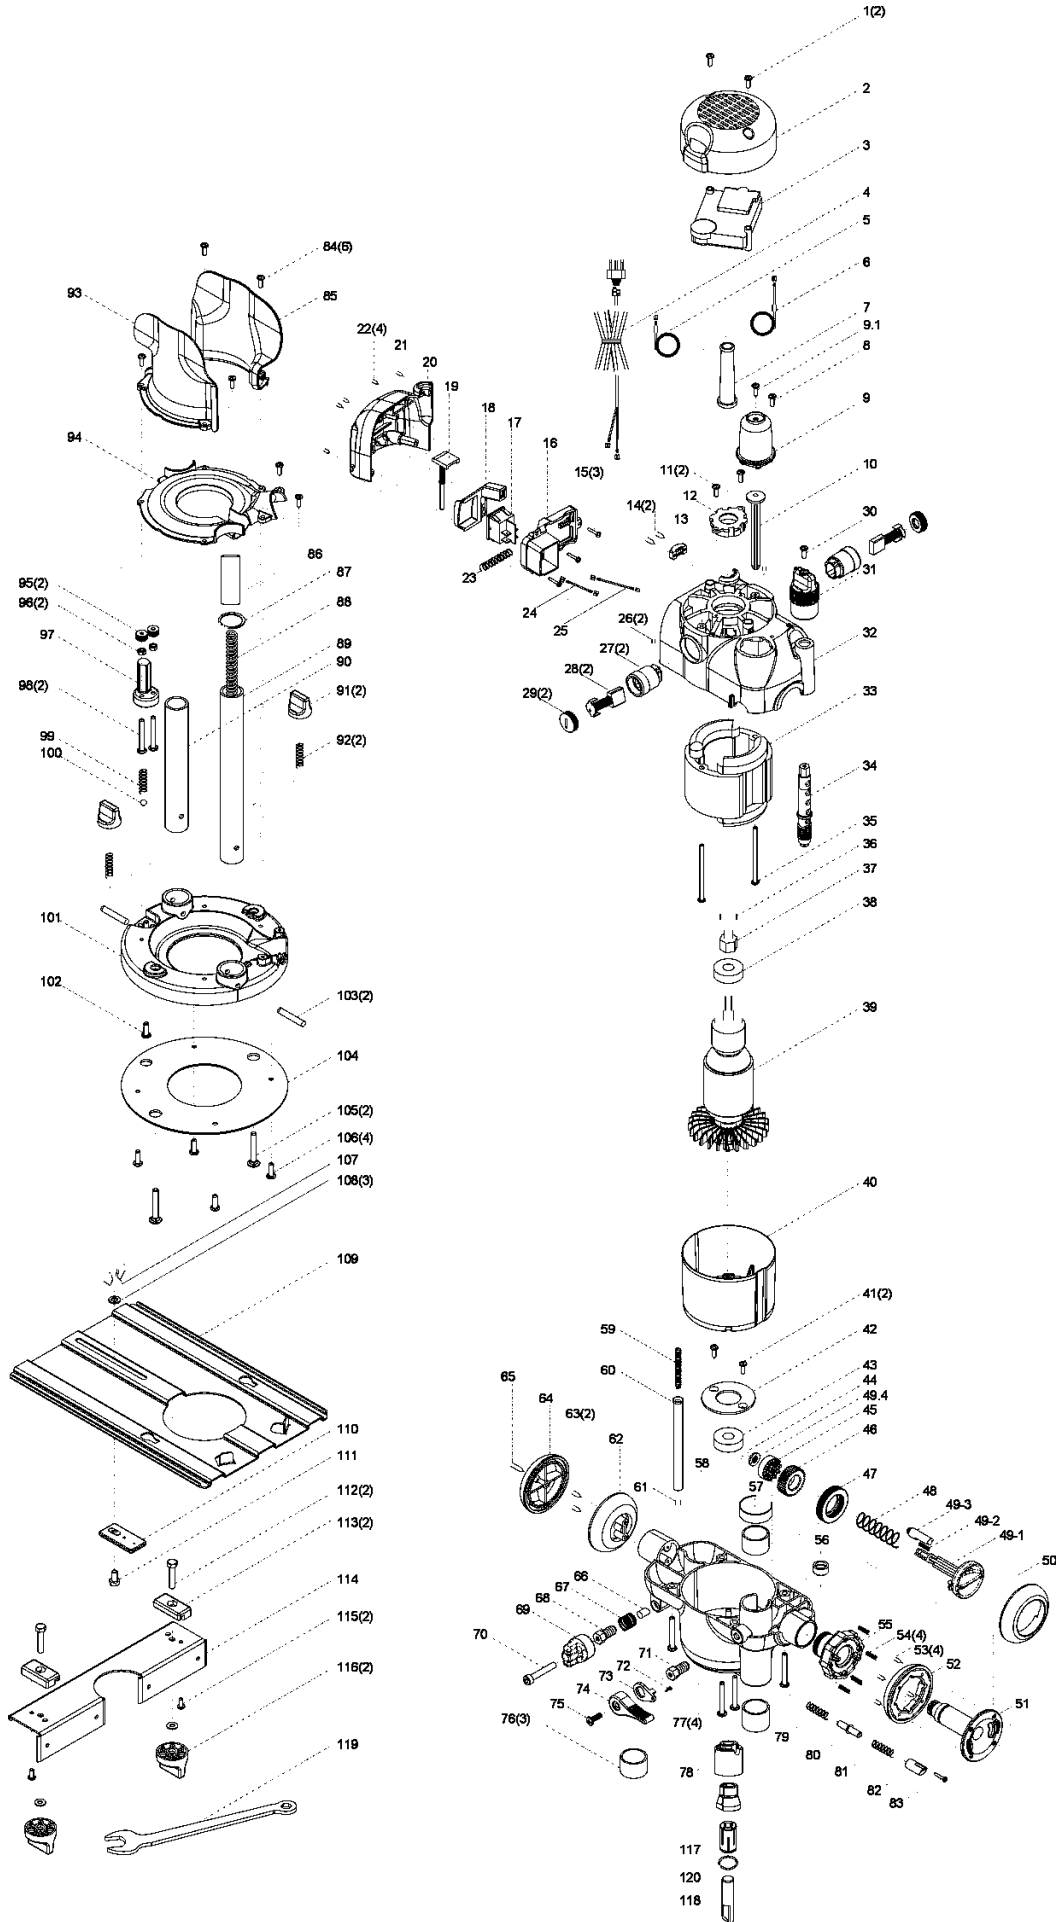

Item No.	Part No.	Description	Item No.	Part No.	Description
1	TRA067	Screw, motor top cover	57, 58, 76	TRA052	Lower motor body & bush assembly
2	TRA007	Motor top cover	59	TRA092	Spring, depth stop
3	TRA027	Speed controller	60	TRA033	Depth stop tube
4	TRC057	Plug and cord	61	TRA058	Plug, depth stop tube
5	TRA068	Brush connection B	62	TRA046	Fixed handle inner
6	TRA069	Brush connection A	63	TRA093	Screw, fixed handle inner
7	TRA018	Cord relief	64	TRA045	Fixed handle outer
8, 9 & 10	TRA136	Rack post guide assembly	65	TRA094	Screw, fixed handle outer
11	TRA071	Screw, upper armature bearing plate	66	TRA032	Depth stop brass plug
12	TRA016	Upper armature bearing plate	67	TRA133	Depth stop knob spring
13	TRA017	Cord restraint	68,69&70	TRA134	Depth knob assembly
14	TRA072	Screw, cord restraint	71	TRA049	Bolt, plunge lock
15,16,17,18,20,23	TRA135	Switch Assembly	72	TRA098	Screw, plunge lock lever plate
19	TRA034	Guide, depth stop spring	73	TRA050	Plate, plunge lock lever
21	TRA074	Screw, switch cover, short	74	TRA048	Plunge lock lever
22	TRA075	Screw, switch cover, long	75	TRA099	Screw, plunge lock lever
24	TRA077	Connecting wire, brown	77	TRA101	Screw, motor body
25	TRA078	Connecting wire, blue	78	TRA013	Chuck Assembly
26	TRA079	Screw, brush holder	79	TRA104	Spring, shaft lock (inner)
27	TRA056	Brush holder	80	TRA026	Pin, shaft lock
28	TRA055	Brush	81	TRA105	Spring, shaft lock (outer)
29	TRA080	Cap, brush holder	82	TRA025	Button, shaft lock
30	TRA081	Screw, micro adjust knob	83	TRA106	Screw, shaft lock button
31	TRA035	Micro adjust knob	84	TRA107	Screw, chip shield
32	TRA005	Upper motor body	85	TRA022	Chip shield, rear
33	TRA003	Field	86	TRA108	Liner, rack post
34	TRA036	Worm shaft, metric	87	TRA109	Snap ring, rack post
35	TRA082	Screw, field	88	TRA110	Spring, rack post
36&37	TRA127	Magnet ring & mount assembly	91	TRA064	Knob, fence attachment
38	TRA085	Upper armature bearing	92	TRA111	Spring, fence attachment knob
39	TRA002	Armature	93	TRA021	Chip shield, front
40	TRA024	Fan shroud	94	TRA023	Vacuum shield
41	TRA086	Screw, lower armature bearing plate	95	TRA030	Turret wheel
42	TRA015	Lower armature bearing plate	96	TRA112	Nut, turret wheel
43	TRA014	Lower armature bearing	97	TRC028	Turret
44	TRA087	E ring	98	TRA113	Screw, turret wheel
45	TRA044	Clutch plate	99	TRA114	Spring, turret
46	TRA043	Plunge pinion	100	TRA029	Turret detent ball
47	TRA037	Worm wheel, metric	89,90,101,103	TRA125	Base & post assembly
48	TRA088	Spring, plunge selector	102	TRA115	Screw, turret pivot
49.1	TRA040	Plunge selector	104	TRA009	Base plate
49.2	TRA132	Spring	105	TRA117	Coach bolt, fence attachment
49.3	TRA131	Plunge selector rear	106	TRA118	Screw. baseplate
50	TRA038	Plunge handle outer	107 to 111	TRA128	Fence plate & circle cutter assembly
51	TRA041	Plunge handle shaft	112 to 116	TRA126	Fence assembly
52	TRA039	Plunge handle inner	117	TRA129	1/4" reduction collet
53	TRA089	Screw, plunge handle	118	TRA124	1/2" cutter
54	TRA090	Spring, release ring	119	TRA066	Spanner
55	TRA042	Release ring	-	PUA526	Instruction Manual
56	TRA047	Bush, metric worm			